 


RadioShack® Cat. No. 15-1832

AM/FM Indoor Amplified Antenna

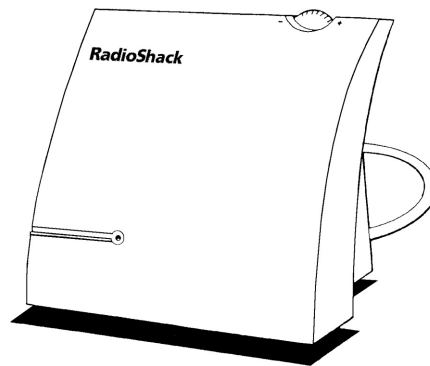

Your AM/FM Indoor Amplified Antenna is compact, easy-to-install and provides superb reception for AM and FM radio stations.

The FM component combines patented technology with a low-noise, high-gain amplifier to boost even the weakest FM signal while eliminating unwanted noise.

 
The AM component provides a compact AM antenna specially tuned for AM broadcasts.

© 1992, 1999 Tandy Corporation.
All Rights Reserved.
RadioShack is a registered trademark used by Tandy Corporation.


PREPARATION

Connecting the FM Antenna


If your stereo has a 75-ohm FM connector, push the antenna cable's F-connector onto the stereo's FM connector.

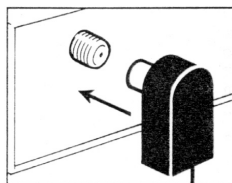

 If your stereo has a 300-ohm twin-lead connector, press the supplied adapter onto the antenna cable. Then secure the adapter's leads to the stereo's FM terminals.

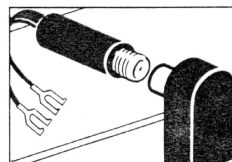


 Note: If the stereo has push-type antenna terminals, cut the spade lugs off the transformer and remove about 1/4-inch of insulation from each lead. Then connect each lead to a push terminal.

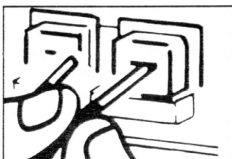

Connecting the AM Antenna

 
Connect one of the antenna's AM leads to your stereo's AM antenna terminal. Connect the other AM lead to your stereo's ground terminal.

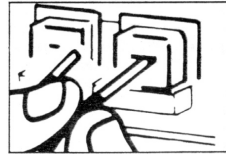

Note: Some AM tuners get better reception if you do not connect the wire to the ground terminal.

Connecting Power to the Antenna

 Plug the supplied power cord's phono plug into the antenna's power jack. Then plug the adapter into an AC outlet.

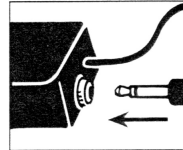


Note: If your stereo has switched AC outlets that turn on when you turn on the stereo, we recommend you plug the antenna's power into one of these outlets.



Caution: You must use a Class 2 power source that supplies 12 volts DC and delivers at least 200 mA. Its center tip must be set to positive and its plug must fit the antenna's **12V** phono jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the antenna or the adapter.

OPERATION

 Rotate the antenna's gain control clockwise to strengthen the signal for weak FM stations. Rotate it counterclockwise to reduce the signal to prevent strong stations from interfering with weaker ones near the same frequency.

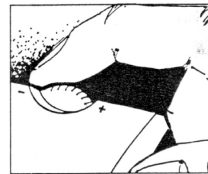

Some rooms have dead spots, or null points, where no radio signals can be received. If the reception is poor, move the antenna for maximum performance.

 
To improve poor AM reception, rotate the antenna.





CARE

To enjoy your AM/FM Indoor Amplified Antenna for a long time:

- Keep the antenna dry. If it gets wet, wipe it dry immediately.
- Use and store the antenna only in normal temperature environments.
- Handle the antenna gently and carefully. Don't drop it.
- Keep the antenna away from dust and dirt.
- Wipe the antenna with a damp cloth occasionally to keep it looking new.



  Modifying or tampering with the antenna's internal components can cause a malfunction and invalidate its warranty. If your antenna is not performing as it should, take it to your local RadioShack store for assistance.



Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W,
100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

05A99

Printed in Hong Kong